
# LEVEL-EYE® USER MANUAL



#### **LEVEL-EYE® HEAD**



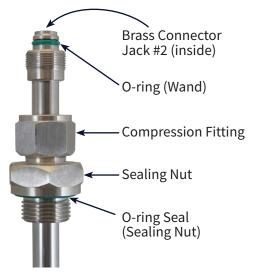

#### SPARE PARTS

	3/4" UNF (Cyl-Tec / TW tanks) 7/8" UNF (Chart tanks)
Level-Eye <sup>®</sup> Battery	CR2477



# LEVEL-EYE® INSTALLATION

The Level-Eye<sup>®</sup> installation should be performed before the filling process. Only install the Level-Eye<sup>®</sup> head & wand onto an empty tank.

- 1. **IMPORTANT!** Verify all the tank contents are removed and the tank is at atmospheric pressure.
- 2. Verify the wand and sealing nut are the correct sizes for the targeted tank model.
- Verify that the O-ring Seal is in place on the sealing nut. 3.
- Remove the old float rod from the knuckle on top of the tank. 4.
- 5. Remove the sealing nut from the Level-Eye wand, thread the nut into the tank knuckle, and wrench-tighten the nut. (NOTE: DO NOT over-tighten or damage may occur.)
- 6. Guide the wand through the sealing nut and wrench-tighten the compression fitting. (NOTE: <u>DO NOT</u> over-tighten or damage may occur.)
- 7. Remove the cover from the Level-Eye and insert the provided battery. Confirm that the LCD display turns on. (NOTE: Because the head is not yet connected to the wand, a "no symbol"  $\bigotimes$  will appear on the right side of the LCD.)
- 8. Attach the cover onto the Level-Eye head. Hand-tighten firmly to fully engage waterproof seal.
- 9. Ensure the O-ring is in place on top of the wand.
- 10. Lift up the wingnut on the Level-Eye base to expose Brass Connector Jack #1.
- 11. Push the Level-Eye head onto the wand firmly until both Brass Connection Jacks #1 & #2 are fully engaged with each other. (NOTE: There should be no gap or obstruction with the connection.)
- 12. Hand-tighten the wingnut. (NOTE: <u>DO NOT wrench-tighten</u> or *irreversible damage may occur that is not under warranty!*)
- 13. Ensure the "no symbol" 🚫 is no longer displayed on the LCD screen. This confirms a proper electronic connection of the Level-Eye head with the wand.
- 14. Proceed to low and high calibrations. (*NOTE: Level-Eye will NOT* provide accurate readings until the entire low and high calibration process is complete. See reverse side for instructions.)

#### BATTERY PERCENTAGE

Level-Eye<sup>®</sup> is able to calculate the amount of battery power remaining and display it by percentages on the LCD screen at any time.

#### To check the battery level:

Single press and release the "L" button to view the 1. battery percentage remaining. NOTE: The display will read "bxx%" to indicate the remaining battery life (i.e. b54%).



2. If battery level is less than 10%, a 🔀 symbol will appear.



### LEVEL-EYE® USER MANUAL

## LEVEL-EYE® CALIBRATION

Level-Eye<sup>®</sup> calibration is a two-step process of setting the liquid level range from an empty (low) level to a full (high) level for your specific tank size and model.

<u>IMPORTANT!</u> Calibration must be performed <u>DURING</u> the filling process to calibrate correctly.

#### **#1: LOW CALIBRATION**

- 1. Add 5 lb. (2.25 kg) of liquid to the empty tank.
- 2. Wait 5-10 minutes to allow the wand to chill.
- 3. Enter Calibration Mode on Level-Eye®:
  - a. Hold the "L" and "R" buttons together for 5 seconds until the word "CAL" is displayed on the LCD, then release.
- 4. Perform Low Calibration:
  - a. As "CAL" is still displayed, hold down the "L" button for 5 seconds until "Lo" is displayed, then release.
  - Wait for the word "CLo" to display on the LCD screen, confirming the low calibration is complete.

**LEVEL-EYE® TROUBLESHOOTING** 



181

- **#2: HIGH CALIBRATION**
- 1. Fill the tank to its full capacity.
- 2. Wait 5-10 minutes to allow the liquid in the tank to settle.

ERL

Hr

EH r

100-

- 3. Enter Calibration Mode again on Level-Eye®:
  - a. Press the "L" and "R" buttons together for 5 seconds until the word "CAL" is displayed on the LCD, then release.
- 4. Perform High Calibration:
  - a. As "CAL" is still displayed, hold down the "R" button for 5 seconds until "Hi" is displayed, then release.
  - b. Wait for the word "CHi" to display on the LCD screen, confirming the high calibration is complete.
- 5. Level-Eye<sup>®</sup> should now display "100%." Congratulations! You have a happy tank.

<u>NOTE:</u> If Level-Eye is ever reinstalled and used on another tank, or with a different liquefied gas, it MUST be re-calibrated to that tank and/ or that specific gas to operate correctly.

Problem	Cause	Action
LCD does not display anything	Replace the battery	<ol> <li>Remove back cover of Level-Eye to access battery.</li> <li>Replace old battery with new one.</li> <li>Replace back cover. Hand-tighten firmly to fully engage waterproof seal.</li> </ol>
LCD only displays "000%" or "100%"	Incorrect calibration	A new calibration sequence (both low and high) needs to be performed.
LCD continues to display "100%" after use	Vessel may have been overfilled	Level-Eye will not read below 100% until the liquid level dips below the calibration point. Monitor gauge regularly according to usage for any change.
LCD displays an "L" next to a number	Normal reading	"L" means "Level" and the number indicates what percentage of liquid gas is left in the tank.
"No Symbol" 🚫 is displaying	Head is not properly communicating with the wand	<ul> <li><u>NOTE</u>: DO NOT perform a calibration while the No Symbol is present!</li> <li>Check the brass jack connectivity between the head and the wand:</li> <li>1. Loosen the wing nut at base of head and remove from wand.</li> <li>2. Check brass connection jacks on both parts for debris or damage.</li> <li>3. If connection is clear, wait 30 seconds and re-attach the head to the wand.</li> <li>4. If "No Symbol" is still present, please contact Cyl-Tec customer service.</li> </ul>
LCD is displaying inaccurate readings	Water damage or moisture	Check for water damage or moisture in the LCD screen or Level-Eye housing. If damage is severe, contact Cyl-Tec customer service - (888) 429-5832.



**Cyl-Tec, Inc.** 971 W. Industrial Dr. Aurora, IL 60506 Local & Outside U.S: 630-844-8800 U.S. Toll Free: 888-429-5832 Fax: 630-844-5100

info@cyl-tec.com www.cyl-tec.com